



Get the reliability and the convenience of Wireless Master/Slave. Meet the WiSe MS kit, an easy wireless master/slave setup. There is no programming or setup, just plug and done. The boards will link up automatically. No more trenching for the master/slave conduit is necessary.

Compatibility: BLDC gate operators.

Frequency: 2.4Ghz

Range: 200+ feet



**BEFORE CONNECTING MASTER/SLAVE COMMUNICATION WIRES, TAKE THE FOLLOWING STEPS:**

- 1: Test and adjust the limit switches and ERDs for each operator as stand alone machines.
- 2: Once the machines have been adjusted, turn SLAVE dip switch “ON” to the slave board.  
Press the RESET button on the slave board.
- 3: Connect the master/slave communication wires to “DATA -” and “DATA +”. Connect power wires to the WiSe MS module (see diagram below).  
The “M/S LINK” LED should be “ON” on both machines.
- 4: Mount the WiSe MS module in a way to have the antennas on the driveway side of operator to optimize the wireless range.
- 4: Connect all accessories to the master operator. Accessories installed on the slave operator **will not work**.

